



## How to connect relay with external motorised valve, pump or other items?

Connect A1 or A2 on relay from motorised valve/pump/other parts.

Connect 11 & 14 on relay to T & A on the boiler.

